

iPad修理メニュー										
※作業費,消費税等全て込みの価格です。										
機種名/症状	ガラス破損	ガラス+液晶	バッテリー	ドックコネクター	インカメラ	アウトカメラ	ホームボタン	ボタンSW	イヤホンジャック	機種名
1st	14,600	21,600	13,600	14,100	12,400	12,400	12,600	13,600	13,600	1st
2nd / 3rd / 4th	13,600	17,600	13,600	14,100	12,400	12,400	12,600	13,600	13,600	2nd / 3rd / 4th
5th / 6th	14,100	21,600	13,600	14,100	14,100	14,100	12,600	13,600	13,600	5th / 6th
7th /8th	14,100	23,600	13,600	14,100	14,100	14,100	12,600	13,600	13,600	7th /8th
9th	15,100	24,600	13,600	14,100	14,100	14,100	12,600	13,600	13,600	9th
10th / A16	16,100	29,600	14,600	15,600	15,600	14,100		13,600		10th / A16
Air	14,100	21,600	13,600	14,100	14,100	14,100	12,600	13,600	13,600	Air
Air2	24,600	24,600	13,600	14,100	14,100	14,100	12,600	13,600	13,600	Air2
Air3	29,600	29,600	14,600	15,600	14,600	14,600	12,600	15,600	13,600	Air3
Air4 Air5	30,600	30,600	14,600	15,100	14,600	14,600		13,600		Air4 Air5
Air 11(M2)	30,600	30,600	14,600	16,100	16,600	16,100		15,600		Air 11(M2)
Air 13(M2)	44,600	44,600	16,600	17,600	16,600	16,100		16,600		Air 13(M2)
Air 11(M3)	30,600	30,600	14,600	16,100	16,600	16,100		15,600		Air 11(M3)
Air 13(M3)	44,600	44,600	16,600	17,600	16,600	16,100		16,600		Air 13(M3)
Air 11(M4) / 13(M4)	94,600	94,600								Air 11(M4) / 13(M4)
mini / mini2 / mini3	13,600	18,600	13,600	14,100	14,100	14,100	12,600	13,600	13,600	mini / mini2 / mini3
mini4 / mini5	23,600	23,600	13,600	14,100	14,100	14,100	12,600	13,600	13,600	mini4 / mini5
mini6	34,600	34,600	14,600	15,100	14,600	14,100		13,600		mini6
mini A17Pro	35,600	35,600	14,600	15,100	14,600	14,100		13,600		mini A17Pro
Pro 9.7	25,600	25,600	13,600	15,600	13,600	14,600	12,600	13,600	14,600	Pro 9.7
Pro 10.5	29,600	29,600	15,600	15,600	15,600	15,600	12,600	16,600	14,600	Pro 10.5
Pro 111st / 2nd	39,600	39,600	15,600	14,600	15,100	15,100		13,600		Pro 111st / 2nd
Pro 11 3rd / 4th	37,600	37,600	15,600	15,100	15,100	15,100		14,600		Pro 11 3rd / 4th
Pro 11 M4	157,600	147,600	24,600	18,600	19,600	21,600		16,600		Pro 11 M4
Pro 11 M5	160,600	148,600	24,600							Pro 11 M5
Pro 12.9 1st	35,600	35,600	15,600	16,100	16,100	16,100	13,600	14,600	14,600	Pro 12.9 1st
Pro 12.9 2nd	50,600	50,600	15,600	16,100	16,100	16,100	13,600	14,600	14,600	Pro 12.9 2nd
Pro 12.9 3rd /4th	37,600	37,600	16,100	14,600	15,100	15,100		14,600		Pro 12.9 3rd /4th
Pro 12.9 5th / 6th	49,600	49,600	16,600	15,100	15,100	15,100		15,600		Pro 12.9 5th / 6th
Pro 13 M4	185,600	185,600	24,600	18,600	19,600	21,600		19,600		Pro 13 M4
Pro 13 M5	216,600	216,600	24,600							Pro 13 M5
機種名/症状	ガラス破損	ガラス+液晶	バッテリー	ドックコネクター	インカメラ	アウトカメラ	ホームボタン	ボタンSW	イヤホンジャック	機種名